

Precautions
















 
- Avoid places exposed to direct sunlight and places with high temperatures, humidity and dryness.
- Do not use on slippery floors.
- Do not use for any purpose other than its intended purpose.
- Regularly retighten the bolts and screws every 2 months.
- Do not use with loose bolts and screws.
- Do not climb on the seat surface. It may cause falls and accidents.
- Be careful not to get your hands or feet caught in the moving parts.
- To remove significant dirt, use a diluted neutral detergent.
- Please do not sit on the seat surface with excessive force. If you sit down vigorously, or with a load of 3 to 4 times your weight the chair may be destroyed.
- Do not sit with more than one person at the same time.
- If even one of the parts including each adjustment bolt, screw, etc. is lost, damaged, or worn out, do not use it until the repair with genuine parts is completed.

*If you do not use the product according to the above precautions, there is a danger of causing a serious accidents or injuries.




Model: YZ501
Instruction Manual

Parts Included

<p>A</p>  <p>X1</p> <p>Backrest</p>	<p>B</p>  <p>X1</p> <p>Headrest</p>	<p>C</p>  <p>X1</p> <p>Seat cushion</p>	<p>D</p>  <p>X5</p> <p>Wheels</p>
<p>E</p>  <p>X1</p> <p>Gas cylinder</p>	<p>F</p>  <p>X1</p> <p>Leg base</p>	<p>G</p>  <p>X2</p> <p>Armrest</p>	<p>H</p>  <p>X1</p> <p>Seat bracket</p>
<p>I</p>  <p>X3</p> <p>Screw M8x55mm</p>	<p>J</p>  <p>X4</p> <p>Screw M6x40mm</p>	<p>K</p>  <p>X6</p> <p>Screw M6x25mm</p>	<p>L</p>  <p>X3</p> <p>Washer M8</p>
<p>M</p>  <p>X10</p> <p>Washer M6</p>	<p>N</p>  <p>X3</p> <p>Flat gasket M8x22x2</p>	<p>O</p>  <p>X10</p> <p>Flat gasket M6x15x1.5</p>	<p>p</p>  <p>X1</p> <p>T key</p>


Step 1

Attach the wheels by pushing them at the edge of the base's legs.

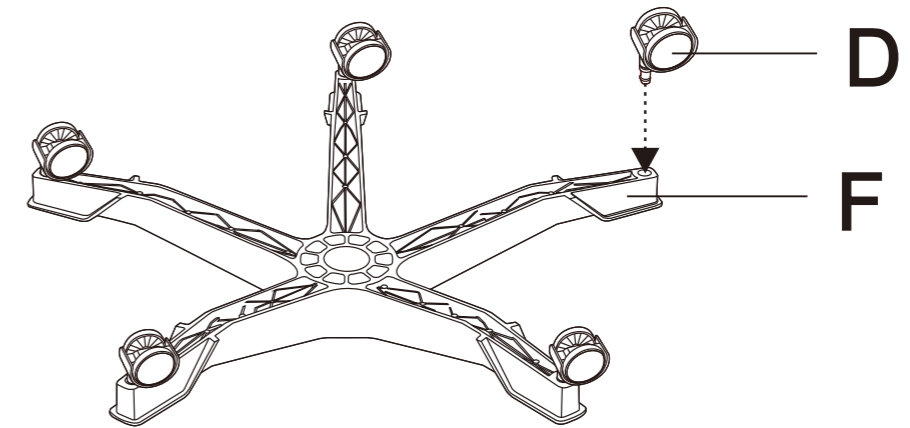


Step 2

Fasten the gas lift at the top portion of the base.

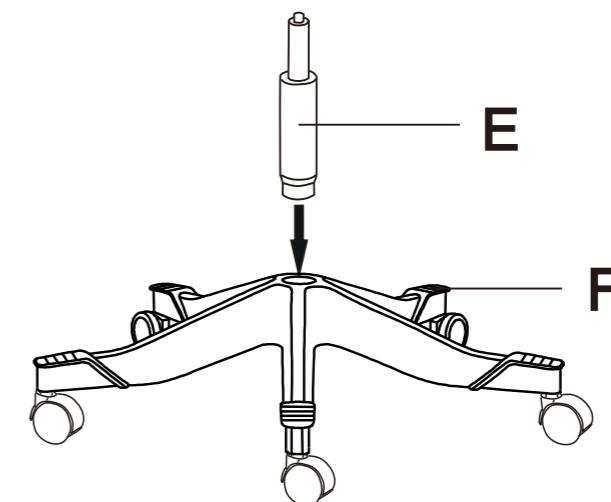


Step 3

Using the T wrench, screw the armrests to the seat cushion using the indicated screws and washers in the photo.

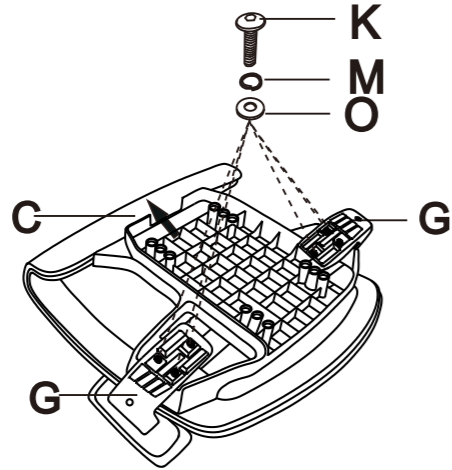


Step 4

Maintain the chair's position by attaching the lever mechanism at the center of the seat cushion.

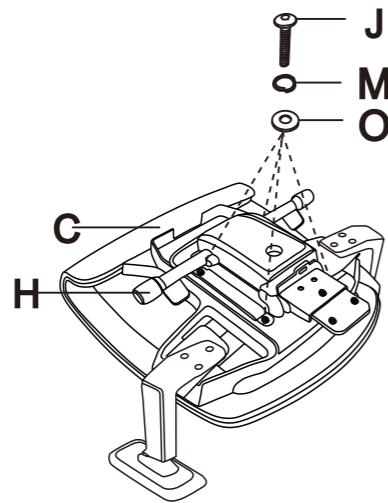


Step 5

Once secure, attach the backrest using the indicated screws.

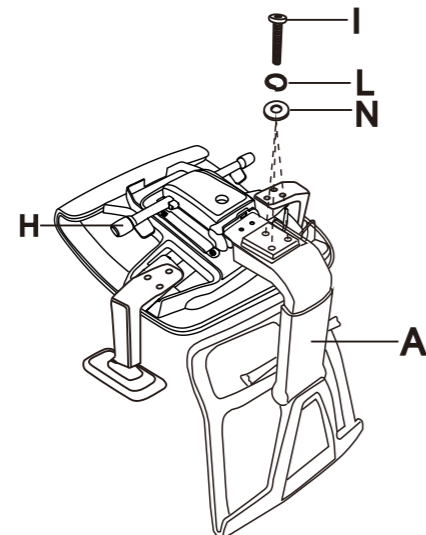


Step 6

Attach the chair to the base of the chair by simply pushing it on the leg base.

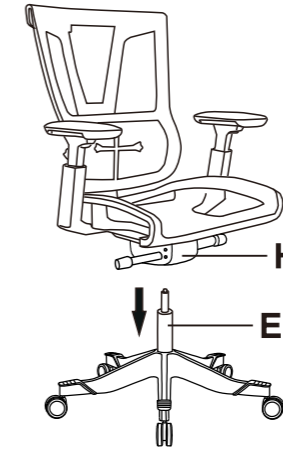

Step 7

Attach the headrest using the indicated screws in the photo.

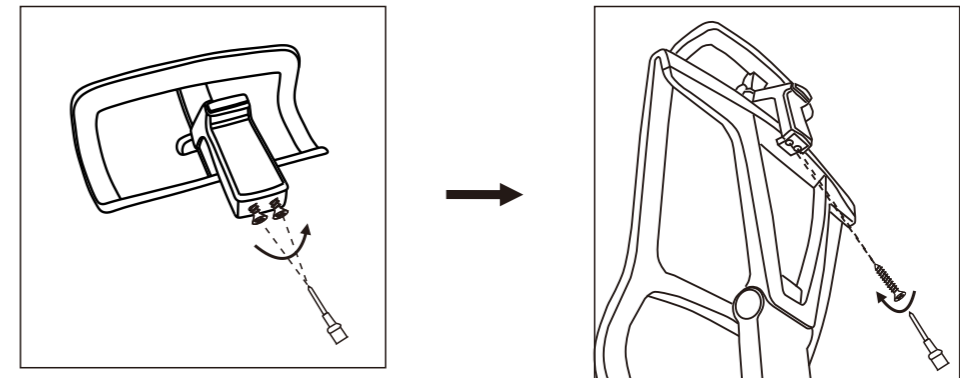


Step 8

Installation is complete. Be sure to test the chair's stability by checking if any screws need to be tightened or if any components need to be adjusted.




How to rotate the headrest

Rotate the headrest up to a 25-degree angle to find a relaxed position for your head and neck.

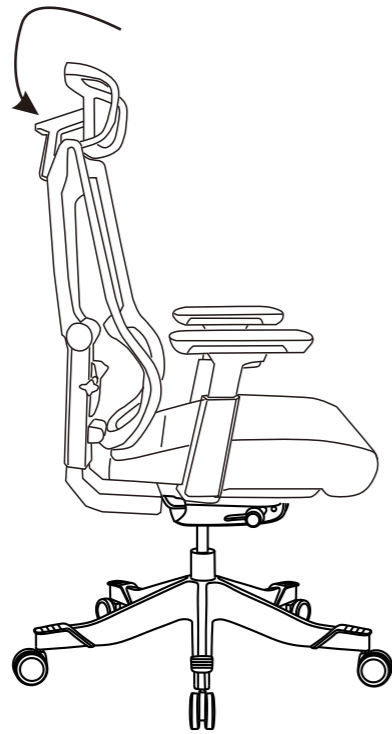


How to calibrate the backrest

Lean forward to lock the chair's setting. Tilt the chair back to unlock it.

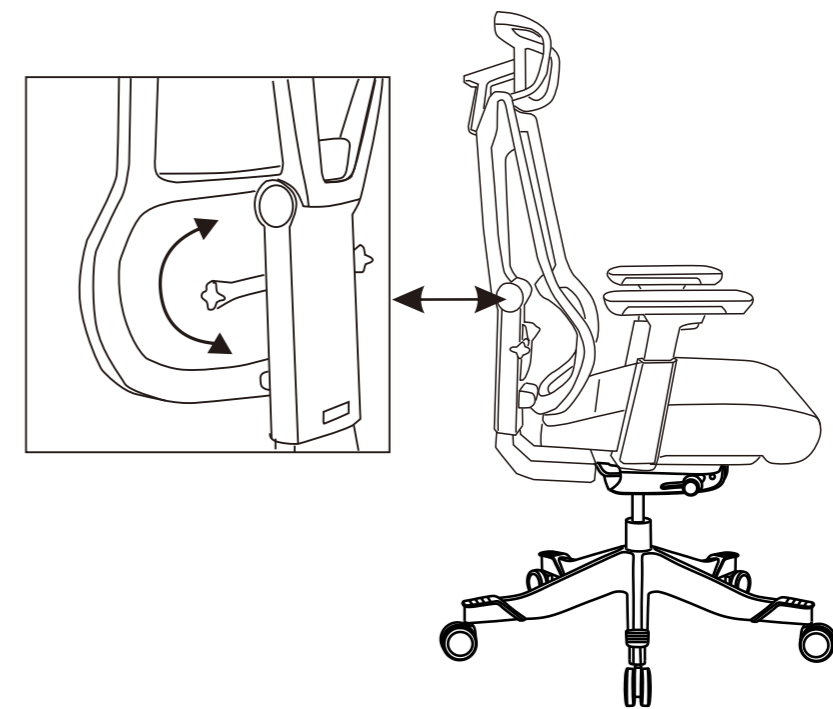


How to adjust the headrest

It can be adjusted up and down and forward and backward within 55mm.

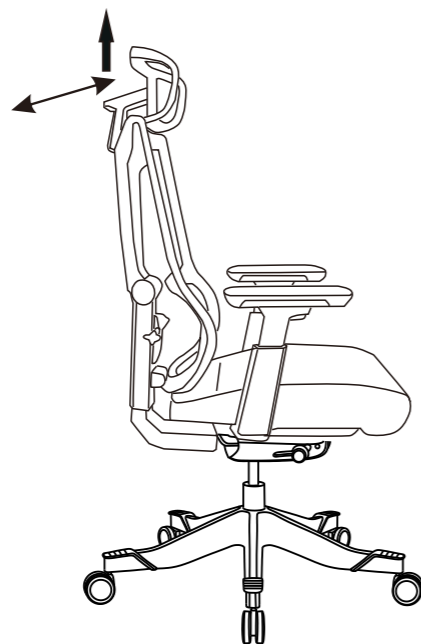


How to adjust the backrest position

The backrest can be adjusted up and down for 60mm. Once it reaches the highest position, it automatically drops to the lowest height.

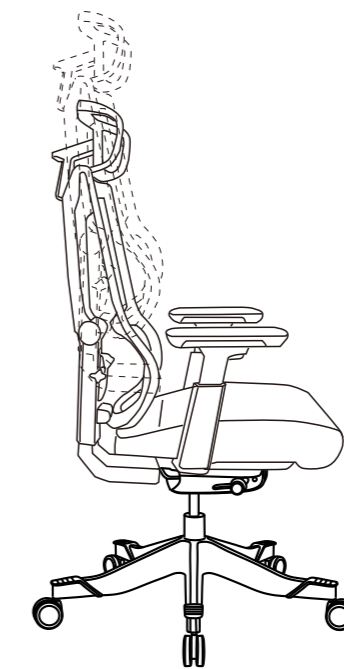


How to adjust the armrests

Move the armrests up and down within 70mm.

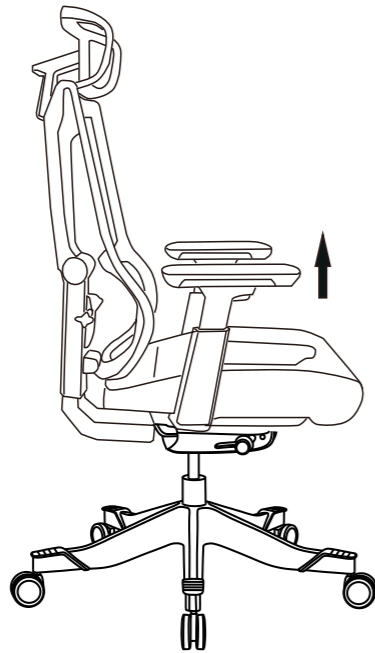


How to adjust the armrests


The armrests can also extend up to 40mm for front and back movements.

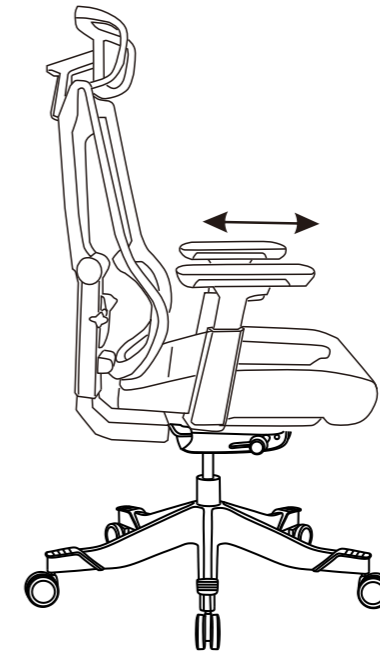

For optimal comfort, the armrests can move left and right within 30mm.

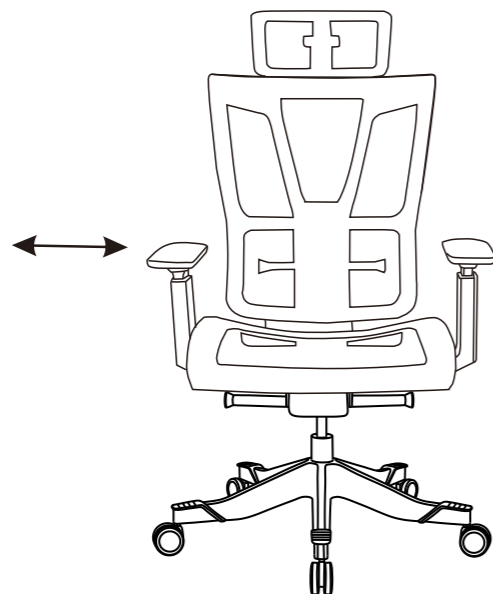


The armrests can rotate up to a 30-degree angle.

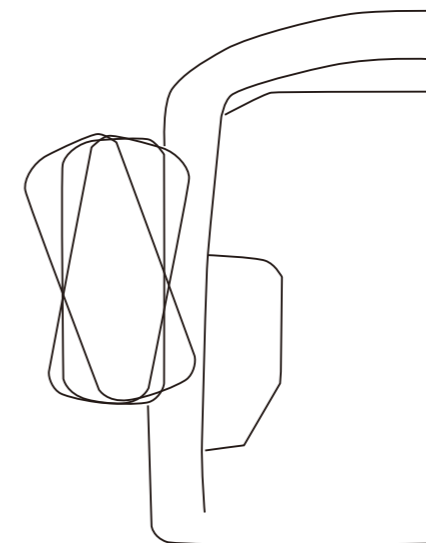

How to adjust the chair height

Lift the handle to adjust the chair's height.

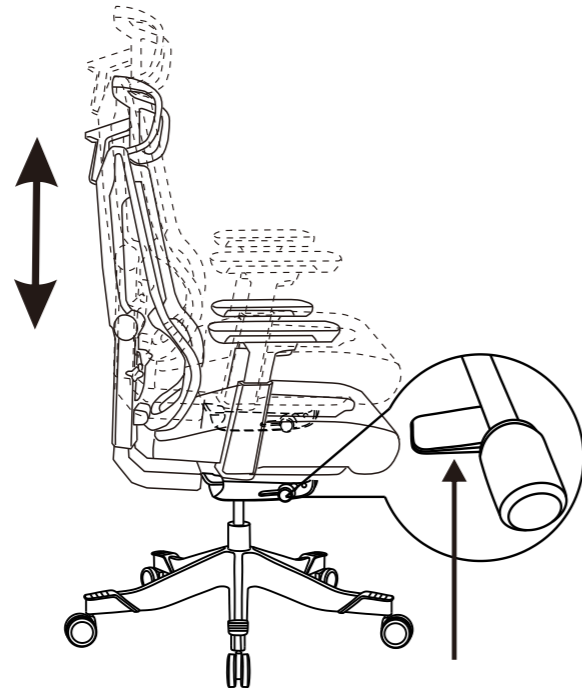


How to adjust the backrest

To tighten the pressure behind the chair, rotate the knob clockwise. Turn the same knob in a counterclockwise direction to loosen the pressure.



How to adjust the seat

Raise the handle to make the seat move back and forth.

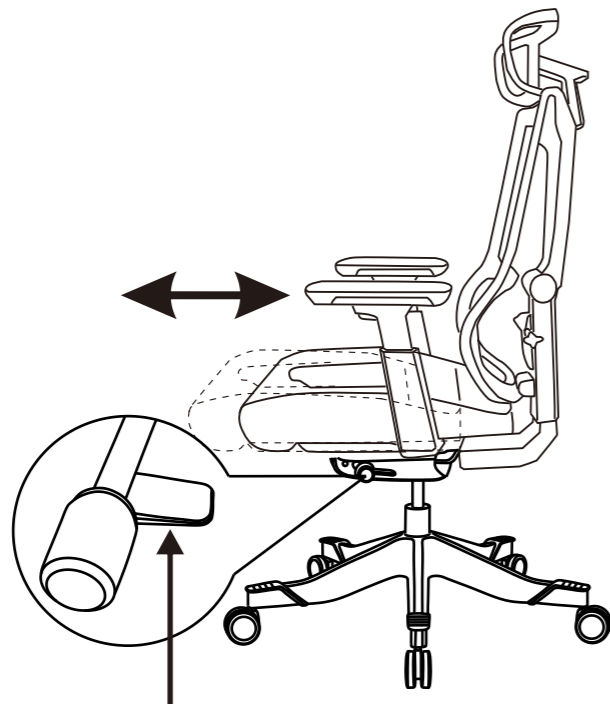

How to lock the chair back

Move the knob counterclockwise to lock the chair's back. Unlock it by rotating the same knob clockwise.

