


A:  X28

B:  X28


C:  X4

(1)

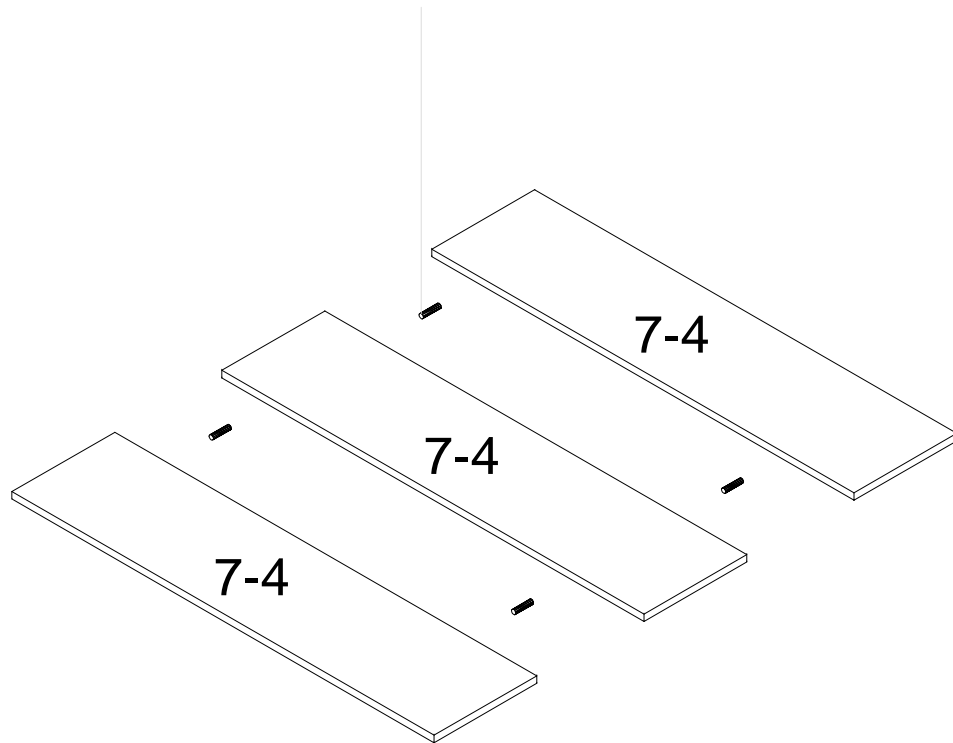


Step 1: Use C to connect 7-4

(2)

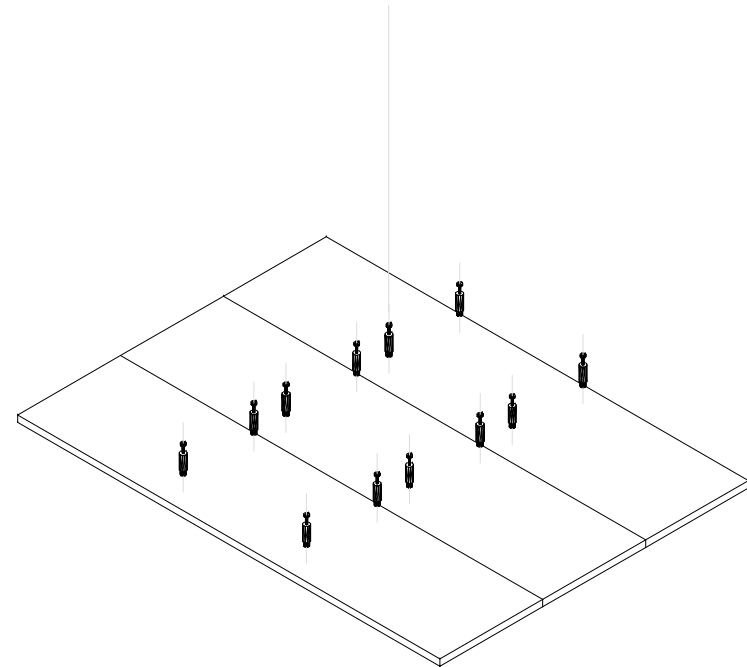


Step 2: Screw A into place

(3)

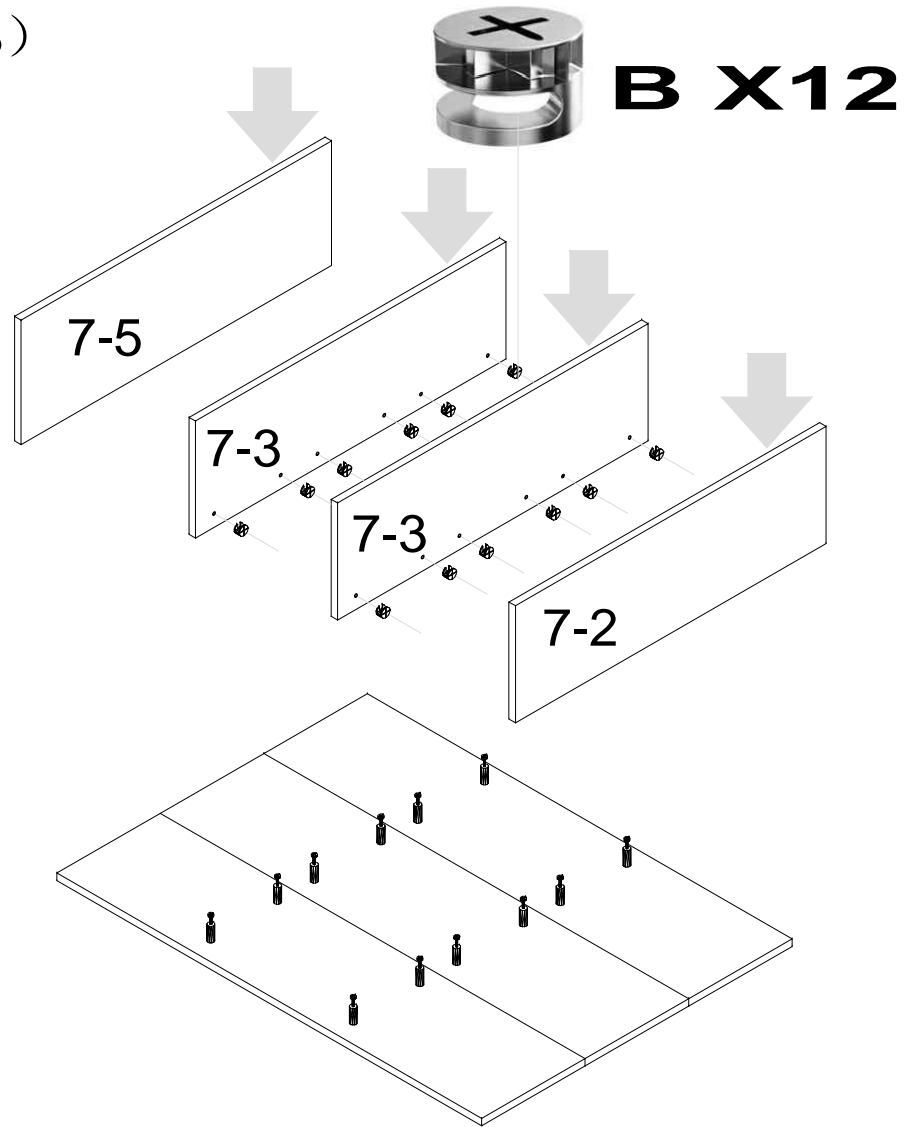

Step 3: Use B and A to connect and fix related parts

(4)

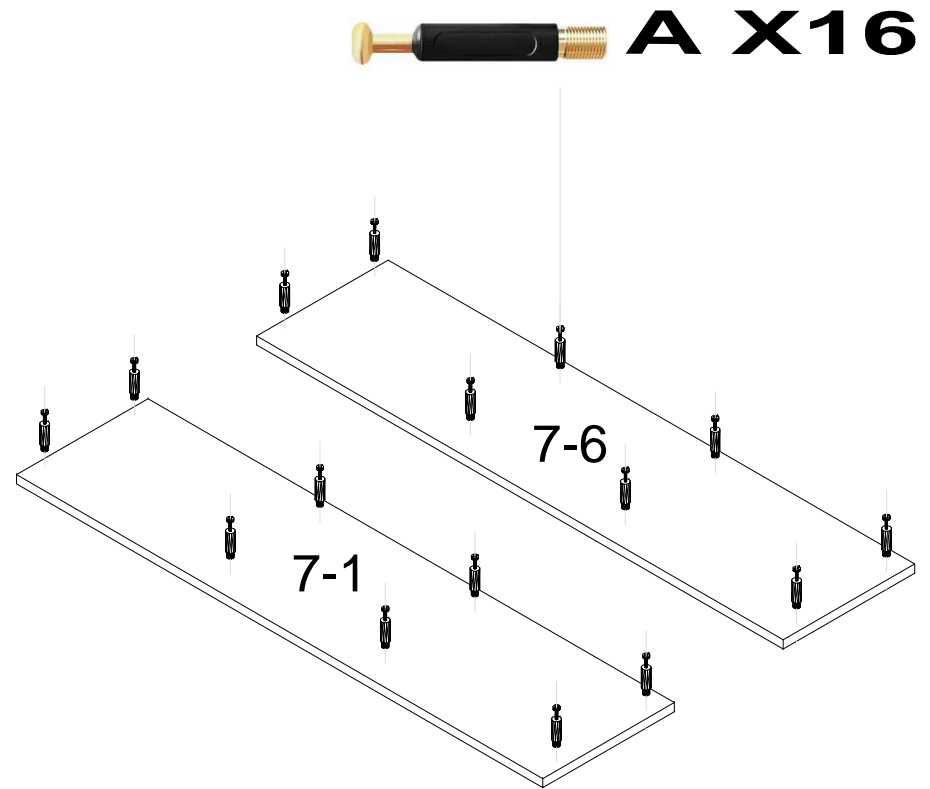


Step 4: Screw A into place

(5)




B X16

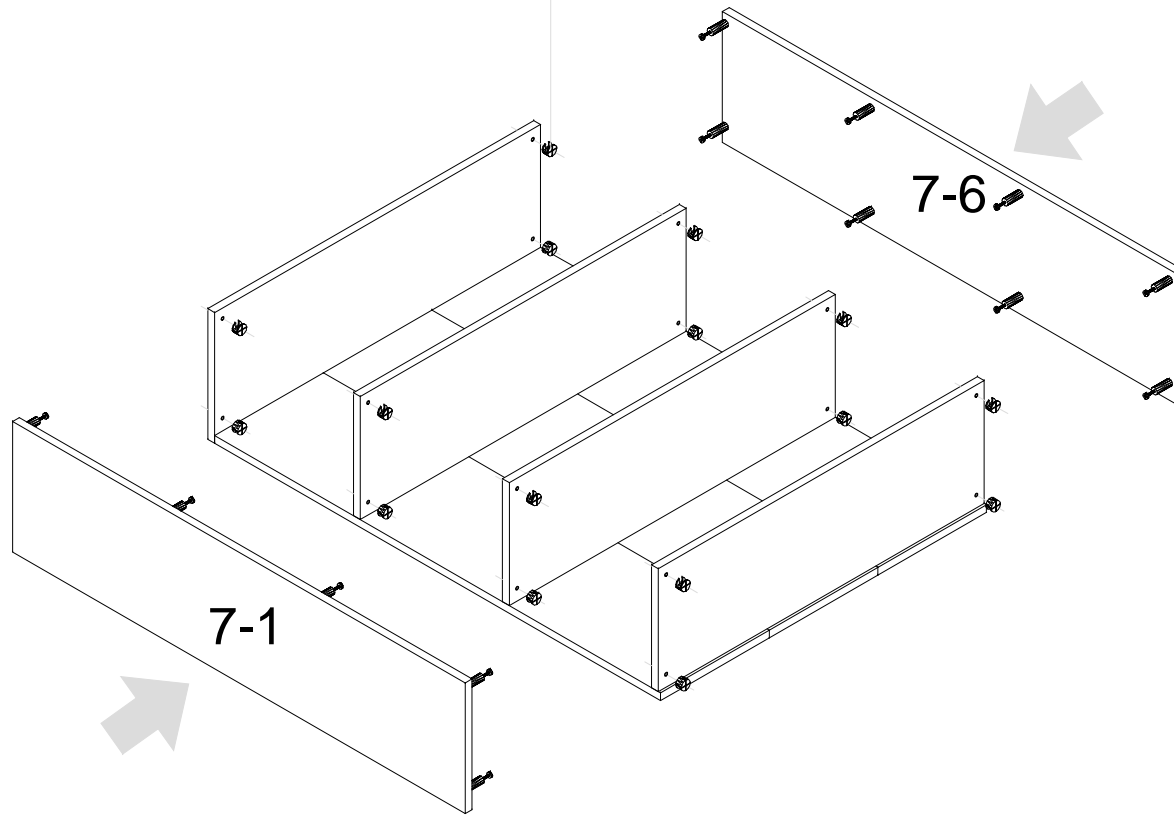

Step 5: Use B and A to connect and fix related parts

(6)

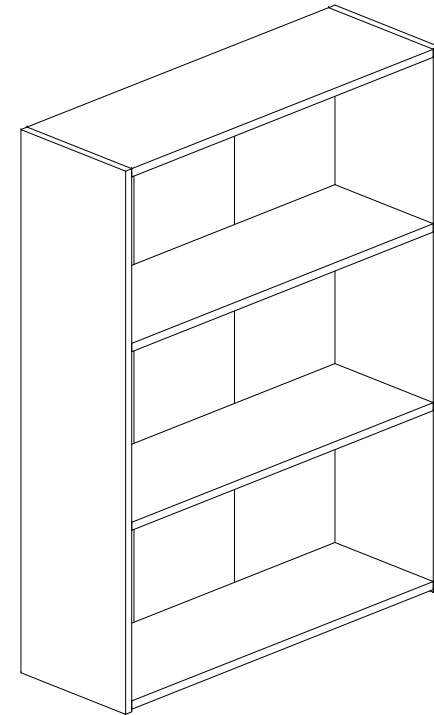

Step 6: finish installation